



Manual Protector Guard M80E – Laptopsafe Electronic



GENERAL

First, read the manual carefully before you start using the safe.

TO OPEN THE SAFE

To open the door of the safe for the first time: Press **1, 5, 9,** and **B**. While you are pressing the numbers the top yellow light (I) on the keypad will display. After pressing **B** the green light will come on (II). Now turn the knob (IV) to the right and open the door.

TO CLOSE THE SAFE

Close the door and turn the knob to the left. The door will now be locked.

TO PROGRAM THE DIGITAL COMBINATION LOCK

1. Press the red button on the inside of the door near the hinges; then release it and you will hear a beep.
2. Now press from 3 to 8 numbers that you wish to use as a combination, and confirm by pressing the letter **B**. Be sure to write them down immediately, so you don't forget how to open the safe.
3. Check if you have entered the correct combination a couple of times – **with the door open** – by pressing the numbers you have chosen followed by **B**. If you have entered the correct combination, first the yellow light (I), then the green light (II) will come on. Then you can turn the knob to the right and the door will open.
4. If the procedure operates without any problems you can close the door and turn the knob to the left, after 5 seconds the electronic closing-mechanism will lock.
5. To open the safe follow the procedure as described in point 3.
6. After entering your correct personal combination, you have 5 seconds to turn the knob before the mechanism relocks. If it relocks, enter your combination again.

TO CHANGE THE BATTERIES

Move the lid of the battery holder (VII) up and place 4 pieces **1,5V AA SIZE ALKALINE** batteries in the holder. Put the lid back in place.


BATTERY REPLACEMENT WARNING

If the batteries are low, a red light (III) will warn you immediately. When the red light flashes you should change the batteries immediately. Failure to do so could result in you not being able to open the safe without resorting to the use of the override key.

OVERRIDE INSTRUCTIONS TO OPEN THE SAFE

For your convenience, we have engineered a manual override system into your Guard M80E. If you forget or misplace your combination, remove the lid of the battery holder (VII). Remove the battery holder that keeps the batteries from the door. Behind this you will find a keyhole. The key delivered with your safe will fit this keyhole. Insert the key and turn it to the right in a clockwise direction. Turn also the knob in a clockwise direction toward the right. This will manually open your safe at any time. Do not keep the key in the safe. In the event of battery failure you will not be able to open the safe.

KEYPAD ON FRONT OF DOOR

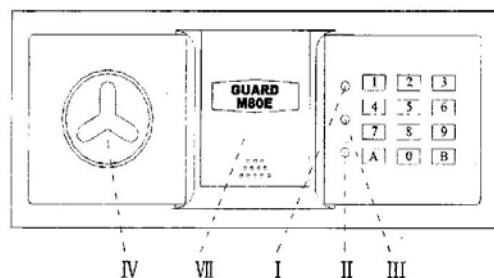

INSIDE OF DOOR

