



Manual La Gard 1521 with time delay

Auto drive – direct drive V20/V21

(ET – Deposit)



GENERAL

The lock operates with a numeric six-digit code or word with 6 letters. A Secondary code can be added. Each key press is confirmed with an audio and light signal. After entry of a valid code a double signal follows. An invalid entry is followed by a long signal. After 10 seconds without entry, an already entered part of the code is cancelled.

To open

Enter code: i.e. 1-2-3-4-5-6 (factory code); unlock door and open. If not opened within 3 seconds, the lock secures automatically.

Or by time delay: (only by V21)

After code entry, time delay starts, recognizable on light signal flashes at one-second interval. At the end of the delay period the open window starts, the light signal flashes twice per second and the lock beeps every 10 seconds. To open the lock, a valid code has to be entered again during the open window. If the open window expires without the lock being opened, the lock is secured again with the time delay. Delete current delay time: press random key. Extend current delay time: enter valid code. The delay period will start again.

Locking:

Close door and turn handle fully to closing position. The lock is secured. Control blocking status by trying to turn handle back.

By

Manipulation protection:

Entry of four consecutive invalid codes – keypad is blocked for 5 minutes. During this period, the light flashes every 10 seconds and any key press causes a long signal. After expiration, entry of two more invalid codes restarts the 5 minute blocking period.




Change code: with safe door open

Press and hold key “0” until double signal. The light remains on during the following actions.

- enter old code (double signal)
- enter new code (double signal) and repeat new code (double signal)

In case of entry errors (long signal), the old code remains valid.

Safety reference: All codes are to be securely stored. Do not use personal data (i.e. Birthdays, telephone numbers etc.) as the code. Change the factory code before you start using the safe!

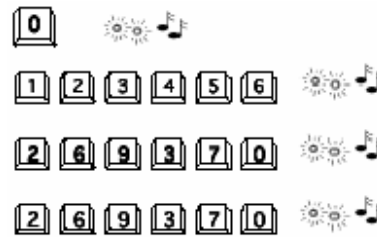


SECOND OPENING CODE

Activate:

Press and hold key “1” until double signal. The light remains on during the following actions.

- enter manager code
- enter secondary code twice (double signal after each)

The second code can be changed like the Manager code. With the Manager code, the secondary code can be deleted. This is not possible the other way round.

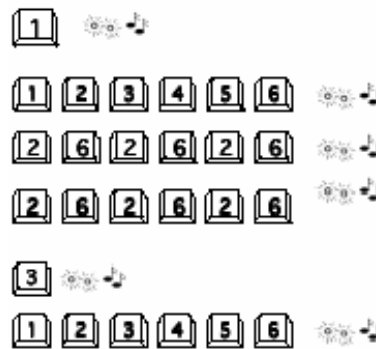

Delete secondary code:

Press and hold key “3” until double signal. The light remains on during the following actions.

- enter manager code
- The secondary code is deleted.

Time Delay (max. 99 min) and open window (max. 19 min)

Press and hold key “9” until double signal. The light remains on during the following actions.

- enter manager code (double signal)
- enter time delay and open window time, f.i. 2612 for 26 minutes time delay and 12 minutes open window (double signal)
- repeat values (double signal)

Note: changing the time delay values can only be done in open window time.



Wat if...

...you hear a long beep after your combination last digit and the lock does not open?

You are entering a not valid combination. Repeat the operation making attention you are entering the correct code.

... light signal flashes every 10 seconds, and, when you push a button you hear a long beep?

You entered 4 times a wrong combination and the lock is in time penalty. Wait 5 minutes and try again. Two more consecutive invalid codes will restart additional 5 minutes penalty period.

... you do not hear any beep when you push a button?

Replace the battery. If the problem is not solved, call your service centre.

... you can open but you hear a long sequence of beeps after your combination last digit?

Immediately replace the battery. (use only 9V Duracell batteries).