

24 hour protection ...every day

Congratulations on the purchase of your PROTECTOR DIGITAL anti-theft safe with electronic keypad and LCD Display

Manual

First, read the manual carefully before you start using the safe.

Never keep the emergency keys and the manual with the master code inside or near the safe

Master code

XXXXXX


The batteries for the lock are delivered inside the safe. You can open the safe for the first time with one of the two emergency keys delivered with the safe. Remove the round part of the lock in which the display is located, by turning it a quarter to the left. Here you find the key lock to open the safe with the emergency key. After you have turned the key, turn the knob to the right.

When you open the door of the safe, you can see the battery compartment on the inside of the door. Slide the lid to the right to open the compartment, place the batteries correctly in the compartment and put the lid back.

Introduction:

- 1 code (2-8 digits)
- Rubber keypad, with 0-9 number keys and * and # function keys
- The code will not be lost when the batteries are empty
- 4 AA alkaline batteries
- Powersave modus
- The display will indicate when the batteries become low

Open

- The factory code is **1 5 9**
- Key in the correct code (*in the display: current code*) → Press # to confirm (*in the display:  and a beep*) → turn the knob right and open the door.

When the knob is not turned right within 5 seconds, the display will go into power save modus.

Close:

- Close the safe by closing the door and turning the knob to the right

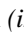 
Wrong code:

- When you have keyed in a wrong number you can remove the number with the * key.
- When 3 wrong are entered, no code can be entered for the next two minutes. During those two minutes the display will show “-----“ when a key is pressed

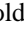 
Code in the display:

- Normally the code is shown in the display when it is being entered. Do you want the code not to be shown in the display: Press * before keying in the code.
- The next time a code is entered the code will be shown again in the display.


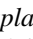 
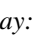 
Change code:

- Change the code always with open door and try the new code a couple of times, so that you can be sure that it functions properly!
- The code change button is located on the inside of the door, you will see this button when you slide the lid of the battery compartment to the right.
- Press the code change button (*in the display:  and two beeps*) → enter the new code (*in the display: new code*) → # (*The new code is activated after 3 flashes of the display and a beep*).

or

- # (*in the display: empty*) → old code (*in the display: old code*) # (*in the display: *) → new code (*in the display: new code*) → # (*The new code is activated after 3 flashes of the display and a beep*).

The master code

- The master code of this safe is on the top of the first page
- **Never keep this manual with the master code inside or near the safe**
- Open the safe with the master code:
- Key in the master code (*in the display: master code*) → press # to confirm (*in the display:  and a beep*) → turn the knob right and open the door.
When the knob is not turned right within 5 seconds, the display will go into power save modus.
- You can also change the user code with the master code (for example when you do not know the user code and the safe is closed)
- # (*display: empty*) → # (*display: empty*) → master code (*display: master code*) # (*in the display: *) → new users code (*in the display: new user code*) → # (*The new code is activated after 3 flashes of the display an a beep*).
- You can now open the safe with the user code with the normal procedure
- Change the master code:
- # (*display: empty*) → # (*display: empty*) → # (*display: empty*) → master code (*in tht display: master code*) # (*in the display : *) → new master code (*display: new master code*) → # (*The new master code is activated after 3 flashes of the display an a beep*).

Power save modus

- When there is more than 20 seconds between operations, the power save modus will come on

Change the batteries

- When a battery is indicated in the display, this means that the batteries are low and need to be changed.
- The battery compartment is located on the inside of the door and contains 4x 1,5 volt batteries

Open the safe with an emergency key

- **Never keep the emergency keys inside or near the safe**
- When you have not changed the batteries in time or if you have forgotten the code you can not open the safe with the electronic lock. You can then open the safe with one of the two emergency keys that have been delivered with the safe.
- Remove the round part of the lock in which the display is located, by turning it a quarter to the left. Here you find the key lock to open the safe with the emergency key. After you have turned the key, turn the knob to the right.