

24 hour protection ...every day

Congratulations on the purchase of your PROTECTOR XS anti-theft safe with electronic keypad.

MANUAL

First, read the manual carefully before you start using the safe.

TO OPEN THE SAFE

To open the door of the safe for the first time: Press **1, 5, 9,** and **B**. While you are pressing the numbers the top yellow light on the keypad will display. After pressing **B** the green light will come on. Now turn the knob to the right and open the door.

TO CLOSE THE SAFE

Close the door and turn the knob to the left. The door will now be locked.

TO PROGRAM THE DIGITAL COMBINATION LOCK

1. Press the red button (X) on the inside of the door near the hinges; then release it and you will hear two beeps and the yellow lamp will light up.
2. Now press from 3 to 8 numbers that you wish to use as a combination, and confirm by pressing the letter **B**. Be sure to write them down immediately, so you don't forget how to open the safe.
3. Check if you have entered the correct combination a couple of times – **with the door open** – by pressing the numbers you have chosen followed by **B**. If you have entered the correct combination, first the yellow, then the green light will come on. Then you can turn the knob to the right and the door will open.
4. If the procedure operates without any problems you can close the door and turn the knob to the left, after 5 seconds the electronic closing-mechanism will lock.
5. To open the safe follow the procedure as described in point 3.

6. If the incorrect code is used, the door will not open. You must now wait 20 seconds to try again. If the wrong code is used again, you must wait over 5 minutes to try again. More incorrect codes will freeze the system for one (1) hour. (See override key instructions).
7. After entering your correct personal combination, you have 5 seconds to turn the knob before the mechanism relocks. If it relocks, enter your combination again.

TO CHANGE THE BATTERIES

Open the door, move the lid of the battery holder, that is on the back of the door (Y), up. And place 4 pieces **1,5V AA SIZE ALKALINE** batteries in the holder. Put the lid back in place. You now need to reprogram your personal code as described above, point 1 and 2.

BATTERY REPLACEMENT WARNING

If the batteries are low, a red light (in the middle) will warn you immediately. To test the batteries, enter your code to open the door. When the batteries are low the red light will light up. When this does not occur, the batteries are fine. When the red light flashes you should change the batteries immediately. Failure to do so could result in you not being able to open the safe without resorting to the use of the override key.

OVERRIDE INSTRUCTIONS TO OPEN THE SAFE

For your convenience, we have engineered a manual override system into your Protector XS. If you forget or misplace your combination, remove the small plate with the CE mark from the lock. Behind this you will find a keyhole. The key delivered with you safe will fit this keyhole. Insert the key and turn it to the left in a counter-clockwise direction. Turn also the knob in a clockwise direction toward the right. This will manually open your safe at any time.

Do not keep the key in the safe. In the event of battery failure you will not be able to open the safe.

