

◆ WHEN THE BATTERY POWER IS LOW OR OUT

When the battery is low, "LOW-bAt" will be displayed on the LCD each time that the "START" button is pushed. You should replace the battery with new one immediately. The battery is located on the back of the door.

If the battery is out with the door closed, you can supply the power with battery pack which should be connected with the bottom socket of the control panel.

Be cautious to put in correct position. (See the picture below).

◆ SYSTEM SELF TESTING

This lock has a Power On Self-testing system. In replacing the battery, the Power On Self-Test has to be started.

If everything is fine, "Good" will be displayed. If a system error is encountered, the following messages will be displayed on LCD.

Error----- Err F : Something wrong with the 'START' button.

Error----- Err b : Something wrong with the 'MEMORY' button.

Error----- Err E : Something wrong with the 'EPROM' button

Error----- Err 1~9 : Something wrong with one of number button.

Contact to the local distributor or where you buy the safe when the errors on.

◆ SYSTEM LOCKING FUCTION

If the wrong numbers are pushed more than 5 times continuously, the alarm will sound and all fuctions will be locked for 3 minutes.

After 3 minutes the system will go back to normal conditions.

(Do not replace the battery under system locking, if then you should wait 3 minutes again.)

